

Supermicro fan control

Quick and dirty

Login to the IPMI interface, go Configuration -> Fan Speed -> Power Usage Effectiveness mode

More stuff

```
apt install ipmiutil
```

Show current fan speeds

```
ipmiutil sensor -g fan
```

-end

Revision #1

Created 30 August 2025 04:26:06 by bluecrow76

Updated 30 August 2025 04:45:57 by bluecrow76